



MICHAEL GRAVES.
DESIGN

OPERATING INSTRUCTIONS

Lot Number: 804-1000

Please read these instructions carefully and keep in a safe place for future reference.



TWO SLICE TOASTER

CONTENTS

BEFORE YOU BEGIN

Important Safeguards	2
Additional Important Safeguards	4
Before Using for the First Time	5

PRODUCT INTRODUCTION

About the Product	5
Location of Controls	6

OPERATION

How to Use Your Toaster	8
Browning Control	9
Countdown Timer	9
Defrost Function	10
Bagel Function	10
Reheat Function	11
Cancel Function	11

CARE & USER EXPERIENCE

Cleaning & Maintenance	12
------------------------	----

WARRANTY

English Warranty	14
Garantía de Español	16

IMPORTANT SAFEGUARDS

WARNING: When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electrical shock, and injury to persons, do not immerse cord, plugs or appliance in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning or storing the appliance.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or mechanical adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electrical shock, or injury to persons.
9. Do not use outdoors or for commercial purposes.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot food, water, oil or other hot liquids.
13. Do not use appliance for other than intended use.
14. A person who has not read and understood all operating and safety

instructions is not qualified to operate this appliance. All users of this appliance must read and understand this instruction manual before operating or cleaning this appliance.

15. If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water!
16. When using this appliance, provide adequate air space above and on all sides for air circulation. Do not operate this appliance while it is touching or near curtains, wall coverings, clothing, dishtowels or other flammable materials.
17. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair a malfunctioning appliance!
18. The cord to this appliance should be plugged into a 120V AC electrical wall outlet.
19. Never yank the cord to disconnect the cooking unit from the outlet. Instead, grasp the plug and pull to disconnect.
20. Use on a heat-resistant, flat level surface only. Do not use this appliance

in an unstable position.

21. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electrical shock.
22. This appliance is hot during operation and retains heat for some time after turning OFF. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning.
23. Do not place anything on top of the toaster while it is operating or while it is hot.
24. Do not attempt to dislodge food when toaster is plugged in.
25. Be sure not to damage the internal mechanism or heating elements when removing bread.
26. Do not toast torn slices of bread.
27. Do not toast pastries with runny fillings or frosting.
28. Do not place buttered bread or wrapped food into the toaster.
29. Do not toast small-size bread, mini-baguettes, breadsticks, etc.

FOR HOUSEHOLD USE ONLY

BEFORE USING FOR THE FIRST TIME

Remove any protective wrapping before using the toaster.

There may be manufacturing residue or oil remaining in the toaster or heating element, which might emit an odor at the time of the first use. This is normal and will not occur after several uses.

It is suggested to operate the toaster without bread for the first use according to the steps in the Operation section of this manual.

Let toaster cool down before you start toasting your first slice.

PRODUCT INTRODUCTION

ABOUT THE PRODUCT

This toaster is designed to put a smile on your face every time you use it. Michael Graves Design combined sophisticated materials with a recognizable toast-like form to create a whole new toasting experience!

This toaster will handle all kinds of bread, bagels and even Texas Toast. Choose from six browning settings. The illuminated toast-shaped display indicates your shade preference and adds a fun visual timer to watch as your bread becomes...toasted to perfection!



PRODUCT INTRODUCTION (cont.)

LOCATION OF CONTROLS

FIGURE 1A

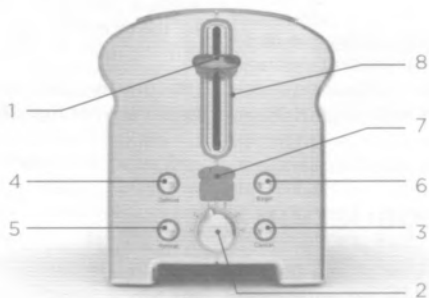


FIGURE 1B

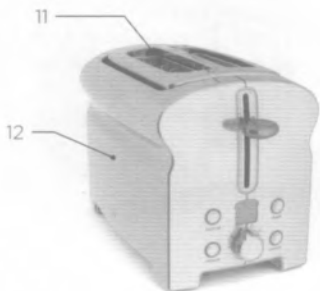


FIGURE 1C



-
- 1. TOAST LEVER:** Press down to begin toasting. The lever will rise automatically when the toast cycle is finished. The extra lift on the lever allows you to safely remove smaller items.
 - 2. BROWNING CONTROL:** The browning control clicks into position to set a precise toasting level with consistent results.
 - 3. CANCEL BUTTON:** Press at any time during a toasting cycle to stop toasting immediately.
 - 4. DEFROST BUTTON:** Press the defrost button to defrost frozen bread before toasting.
 - 5. REHEAT BUTTON:** Press the reheat button to reheat bread that has cooled too quickly.
 - 6. BAGEL BUTTON:** Press the Bagel button to adjust the toasting time for delicious results.
 - 7. TOAST WINDOW:** The backlit LCD screen displays your browning selection as well as the time remaining in the toasting cycle.
 - 8. POWER INDICATOR RING:** Illuminates to indicate when the toaster is toasting.
 - 9. SLIDE OUT CRUMB TRAY:** A removable crumb tray makes cleaning a breeze and keeps your counter top free from toast debris.
 - 10. CORD WRAP:** The cord wraps into the base for easy storage and to keep your countertop neat.
 - 11. DEEP VARIABLE WIDTH SLOTS:** Extra deep chambers and variable width slots feature auto centering guides to evenly toast thick or thin slices.
 - 12. DIE CAST CONSTRUCTION:** The die-cast metal housing stays cool to the touch during toasting and offers durability to stand the test of time.

OPERATION

HOW TO USE YOUR TOASTER

1. Plug the Toaster into a 120V AC outlet.
2. Place one or two slices of bread into the toasting slots and press the TOAST LEVER down until it latches. The power indicator ring will light up and the toaster will automatically start toasting.
3. Adjust the BROWNING CONTROL to brown the toast to your taste. Select a toasting function if desired.
4. To stop toasting, press the CANCEL button at any time.
5. The TOAST LEVER will rise automatically when toasting is finished. The toast can be safely removed.
6. Lift up on the TOAST LEVER to assist in removing the toast. The extra lift on the lever allows you to safely remove smaller items.
7. Never attempt to remove bread jammed in the slots without first unplugging the toaster from the electrical outlet. Be sure not to damage the internal mechanism or heating elements when removing bread.
8. If the toast is not dark enough, you can toast the bread again. Adjust the browning control to a higher setting and replace the toast. Ensure the toast does not burn while re-toasting.

BROWNING CONTROL

The browning control enables the adjustment of the toasting time. There are six browning levels available. Each level is represented in the toast window with a series of pixels that lighten or darken the screen according to the toast color that will be achieved. (See Figure 2.1)


The browning settings are as follows:

1-2 for light toasting

3-4 for medium toasting

5-6 for dark toasting


FIGURE 2.1

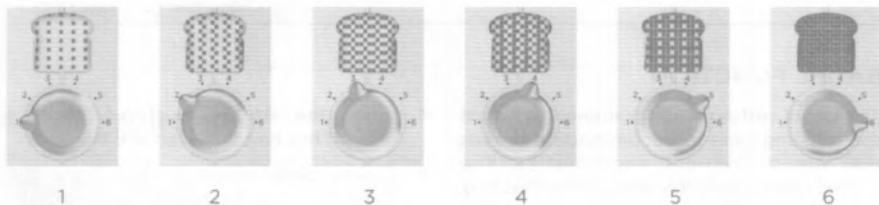

COUNTDOWN TIMER

The toast window also functions as a countdown timer. After you have depressed the toast lever and selected your desired browning setting, the pixels will begin to turn off one by one. (See Figure 2.2). When there are no pixels remaining in the display, the toasting process is complete and the toast lever will rise automatically.

FIGURE 2.2

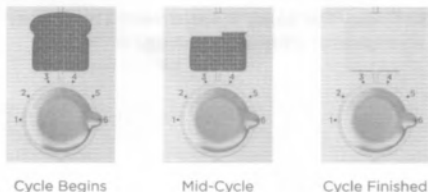

OPERATION (cont.)

DEFROST FUNCTION

Your toaster can defrost frozen bread before toasting if desired.

1. Place the bread in the toaster.
2. Set the browning control to the desired setting.
3. Press the toast lever down. The power indicator ring will light up.
4. Press the DEFROST button. The ring surrounding the defrost button will illuminate.
5. Ensure toast doesn't burn. Press the CANCEL button to stop the defrosting cycle.
6. The toast lever will rise automatically when toasting is finished.

BAGEL FUNCTION

The bagel setting is programmed to adjust the toasting time to accommodate breads that are thicker and more dense. The setting works great for english muffins too!

1. Place one bagel half in each toasting slot with the cut side facing the center.
2. Set the browning control to the desired setting.
3. Press the toast lever down. The power indicator ring will light up.
4. Press the BAGEL button. The ring around the bagel button will illuminate.
5. Ensure bagel doesn't burn. Press the CANCEL button to stop the toasting cycle.
6. The toast lever will rise automatically when the toasting cycle is complete.

REHEAT FUNCTION

Your toaster can reheat bread that has cooled too quickly.

1. Place the bread in the toaster.
2. No shade adjustment is necessary or possible. The reheat setting is a pre-set time that will override any previous selection.
3. Press the toast lever down. The power indicator ring will light up.
4. Press the REHEAT button. The ring surrounding the reheat button will illuminate and the toast window will display wavy lines.
5. Press the CANCEL button to stop the cycle at any time.
6. The toast lever will rise automatically when reheating is finished.

CANCEL FUNCTION

The CANCEL button can be pressed at any time during toasting.

1. If toaster starts to smoke, press CANCEL to stop toasting immediately.
2. Remove all protective wrapping before using the toaster.
3. Do not toast food with funny ingredients.
4. Never attempt to remove bread jammed in the slots without first unplugging the toaster from the electrical outlet. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is to be used for toasting regular bread slices only. Do not use the toaster to toast irregular shaped bread or round bread.

CARE & USER EXPERIENCE

CLEANING & MAINTENANCE

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly other than cleaning, must be performed by a qualified appliance repair technician.

CAUTION: NEVER IMMERSE BODY OR CORD IN WATER OR OTHER LIQUID.

- Always unplug and allow to cool completely before cleaning.
- Wipe the outside with a soft dry cloth after toaster cools down. Never use metal polish.
- Pull out crumb tray on bottom of toaster (Figure 3.1) and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is inserted correctly to the toaster and completely closed before using the toaster again.
- The power cord may be wound under the bottom of the toaster when not in use or for storage.

FIGURE 3.1



WARRANTY

LIMITED ONE-YEAR WARRANTY

SENSIO Inc. hereby warrants that for a period of one year from the date of purchase, this product will be free from mechanical defects in material and workmanship, and for 90 days in respect to non-mechanical parts. At its sole discretion, SENSIO Inc. will either repair or replace the product found to be defective, or issue a refund on the product during the warranty period. Any refund to the customer will be at a pro-rated value based on the remaining period of the warranty.

The warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt, as proof of purchase is required to obtain warranty validation. Retail stores selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.

EXCLUSIONS: The warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use of the product, use of improper voltage or current, improper routine maintenance, use contrary to the operating instructions, disassembly, repair, or alteration by anyone other than qualified SENSIO Inc. personnel. Also, the warranty does not cover Acts of God such as fire, floods, hurricanes, or tornadoes.

SENSIO Inc. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, and therefore, the above exclusions or limitations may not apply to you. The warranty covers specific legal rights which may vary by state, province and/or jurisdiction.

HOW TO OBTAIN WARRANTY SERVICE:

You must contact Customer Service at our toll-free number: 1-866-832-4843. A Customer Service Representative will attempt to resolve warranty issues over the phone. If the Customer Service Representative is unable to resolve the problem, you will be provided with a case number and asked to return the product to SENSIO Inc. Attach a tag to the product that includes: your name, address, daytime contact telephone number, case number, and description of the problem. Also, include a copy of the original sales receipt. Carefully package the tagged product with the sales receipt, and send it (with shipping and insurance prepaid) to SENSIO Inc.'s address. SENSIO Inc. shall bear no responsibility or liability for the returned product while in transit to SENSIO Inc.'s Customer Service Center.