

Penthouse #5 Television Instructions

TV Inputs:

Antenna: Direct cable feed for watching standard definition cable
HDMI 1: Blu-ray DVD player for watching DVDs
HDMI 3: Cable Box for watching HD cable and using the DVR

Simple TV Viewing:

For simplest operation, and just watch standard definition cable, use the Sony TV remote control. Press the black TV Power button to turn the TV on. Pressing channel up and channel down should change the stations. If this does not work, press 'INPUT' and make sure it is on Antenna or Cable.

Watching HD Cable and/or using the DVR:

Using the Time Warner Cable remote control, press TV, then press Power. Press Cable (CBL) then press Power. If things are not working properly, press the Video Source button (bottom left) and insure the input is set to HDMI 3. When you see 'TV Guide', you are not on cable and need to change the input to HDMI 3.

Watching a DVD Movie:

Using the Time Warner Cable remote control, press TV, then Power. Press Video Source and choose HDMI 1. Using the DVD remote control, turn on the power to the device. You should now see the DVD boot screen on the TV. (Alternatively, on the Time Warner Cable remote control, you can press DVD, then Power, to turn on the DVD).

NOTES:

When using the Time Warner remote control, which device it is working with is set by pressing DVD, TV or CBL at the top. Once selected, then pressing Power or other buttons will be affecting this device. This is confirmed as the device button selected lights up with each key pressed.

Please let me know if you notice a better way to describe operation.